

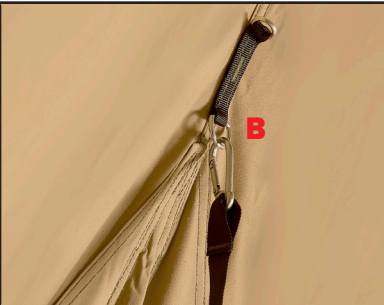



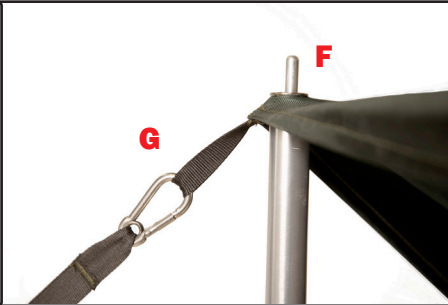






Opening up your Safirflex

Follow these steps to open up the brim of your Safirflex in a safe way



<p>1. Put up the Nordic tipi in the same way as an ordinary Safir 15 as described in the manual "Putting up your Nordic tipi". Use 16 stakes instead of 8.</p>		<p>2. From the inside, unbutton the triangular expansion panels (A) from the sections you want to open up and from one section on either side of the part you want to raise. Open the zippers in the expansion panels from the outside. If you want to raise the entire brim, release all the expansion panels.</p>	
<p>3. For each section that is going to be opened, the ground tensioner must be replaced with a longer strap. Attach one of the included flex-straps to the D-ring at head height on the inside of the tent (B) and push the end with the O-ring out under the bottom edge of the tent (C).</p>			
<p>4. Slacken the ground tensioner and unhook it from the tent stake. Hook the flex-strap (C) on to the stake instead. Pull to make the tent taut again. It is important you only do this one ground tensioner at a time.</p>		<p>5. Undo the ground tensioners (D) on each side of the part to be raised and open the zippers in the triangular expansion panels (E) all the way up as described in step 2.</p>	
<p>6. Pull out the telescopic pole to about 180 cm and push the end of the pole through the eyelet in the middle of the panel's bottom edge (F). Attach a flex-strap to the band loop, using the carabiner (G). Attach the other end of the strap to the ground with a stake and tighten the strap. Repeat steps 2-6 for each section you want to raise. To facilitate water run-off, attach a flex-strap to the band loop between each pole. The ground tensioners on each side of the raised section(s) may need to be replaced with flex-straps so they reach down to the tent stakes.</p>			
<p>7. The straps used at step 3 may now be removed but we recommend you leave them in place in case of gusts of wind. It will also make it easier and faster to close the brim later. When closed, Safirflex is as storm-resistant as an ordinary Safir.</p>			

Safirflex is not intended to resist strong winds and snow when the brim is partly or fully raised. The exceptional storm resistance of a Tentipi® Adventure Nordic tipi is maintained by the tent being designed so that the brim can easily be closed in bad weather.



Peg and pole guide



Two sections raised



Eight sections raised

When you buy a Safirflex, the pack includes everything you need to put up the tent with two raised sections. To open more sections, supplement your purchase with telescopic poles, flex-straps and steel stakes as stated in the table below.

All the parts needed to raise 2 sections are included. The table below states what is needed to open up 3, 4, 5, 6, or 8 sections:

Art. no.	Product name	2	3	4	5	6	8
21100	Telescopic pole 200	3	1	2	3	4	5
46031	Flex-strap 19/3	10	3	6	9	12	14
25115	TT Steel stake 23 Pro	20	0	1	2	3	4
25127	TT Y-peg 18 Pro	18					
25130	TT Hook peg 18 Pro	18					